

To add a **non-Ultimaker printer** in Ultimaker Cura, follow the steps below.

Step 1: Open Printer Settings

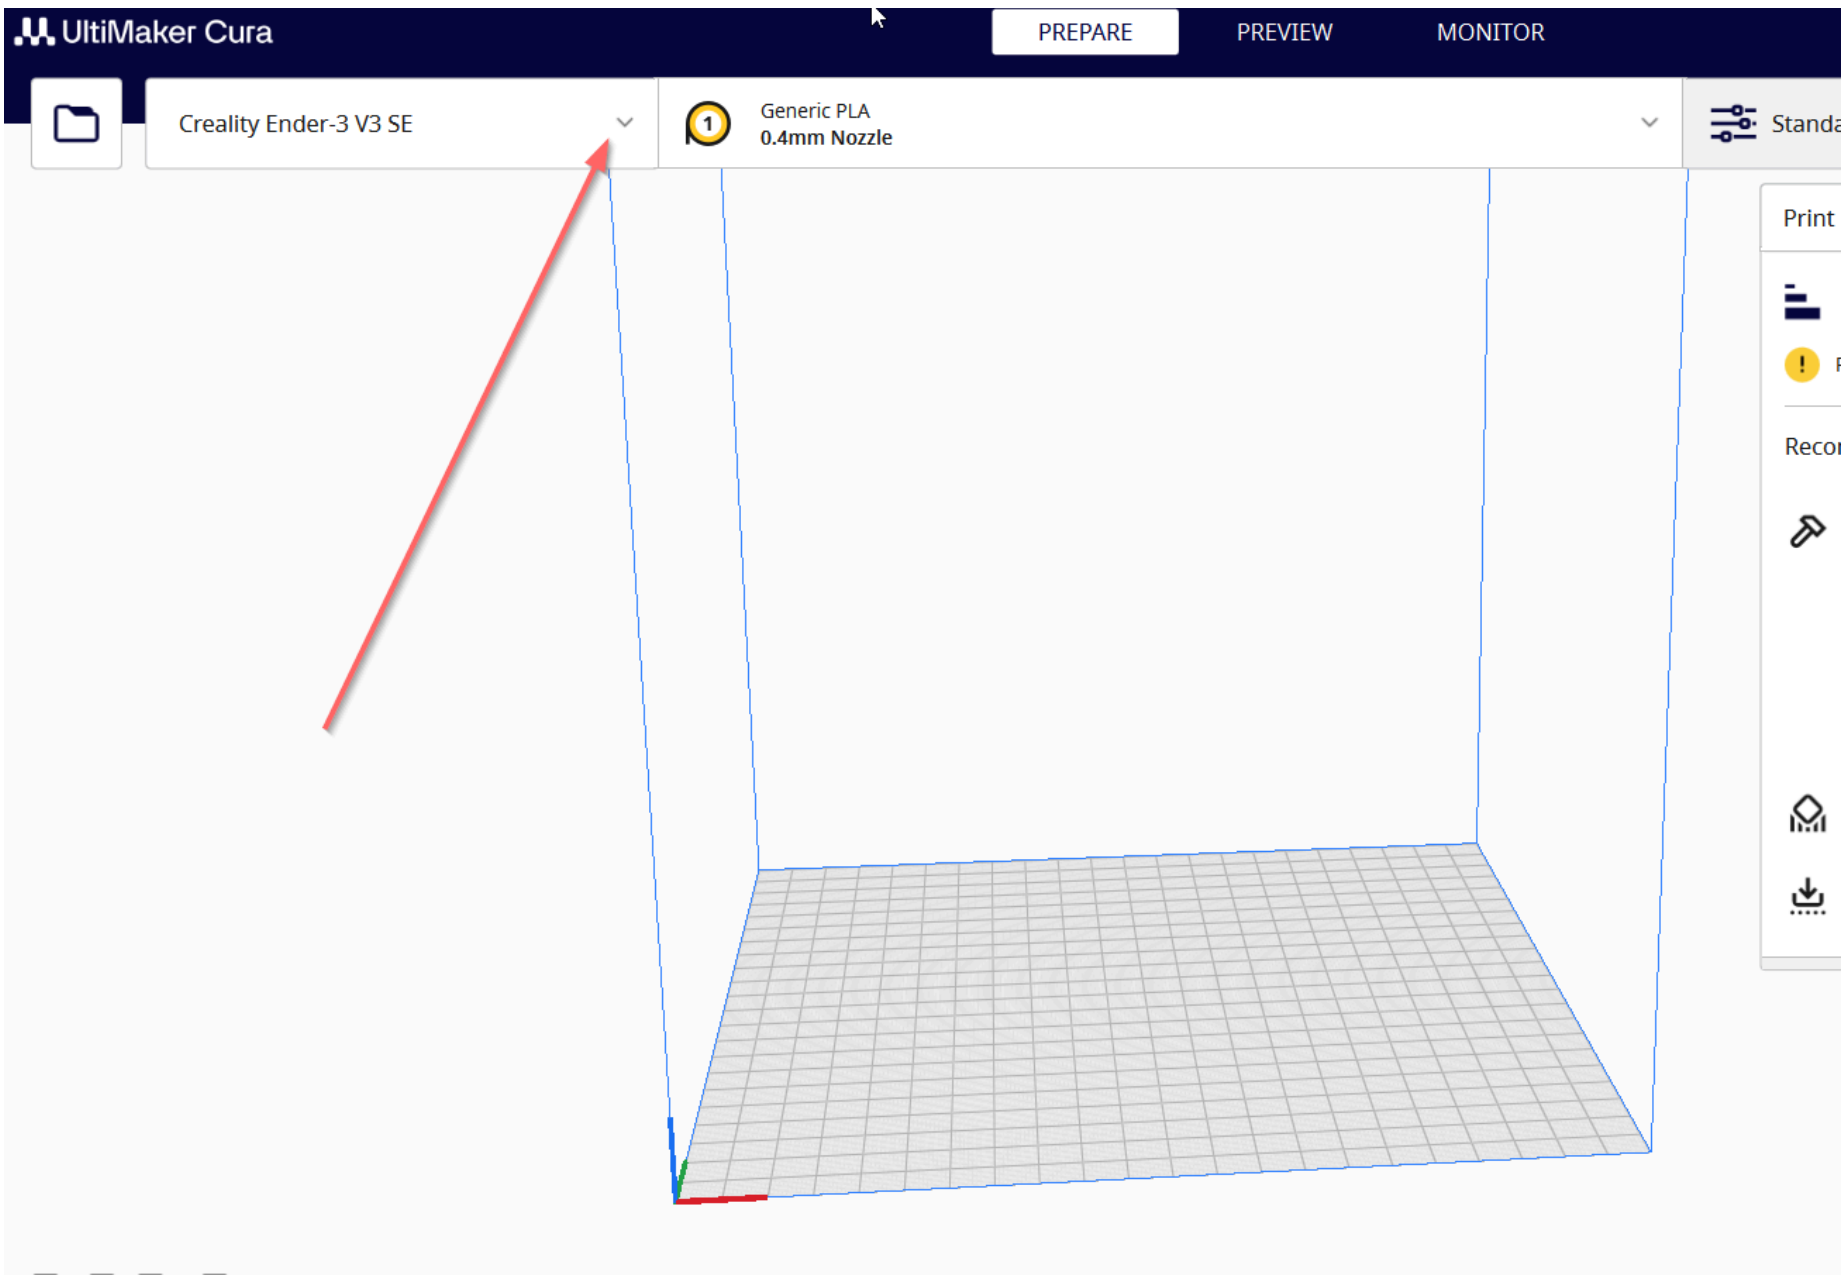


Go to the **Printer / Add Printer** option as shown above.

Step 2: Click on Add Printer

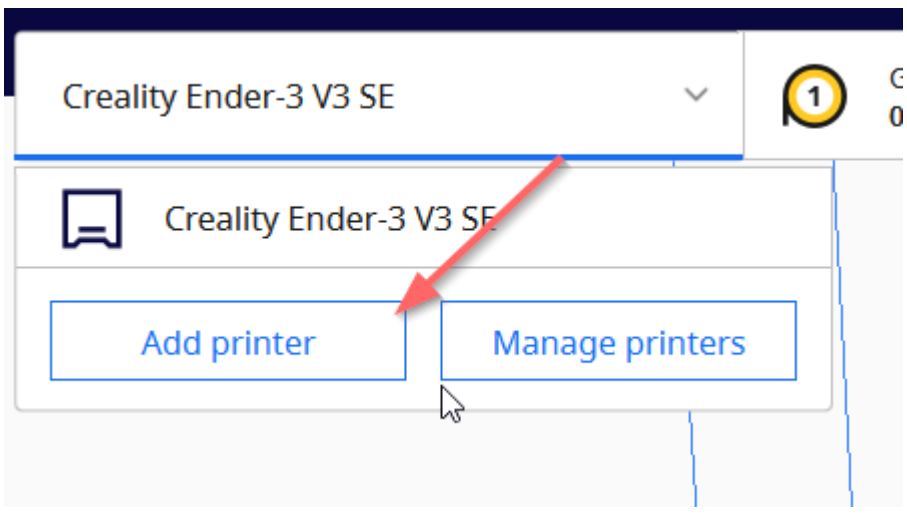


Select **Add Printer**.

Step 3: Choose Non-Ultimaker Printer

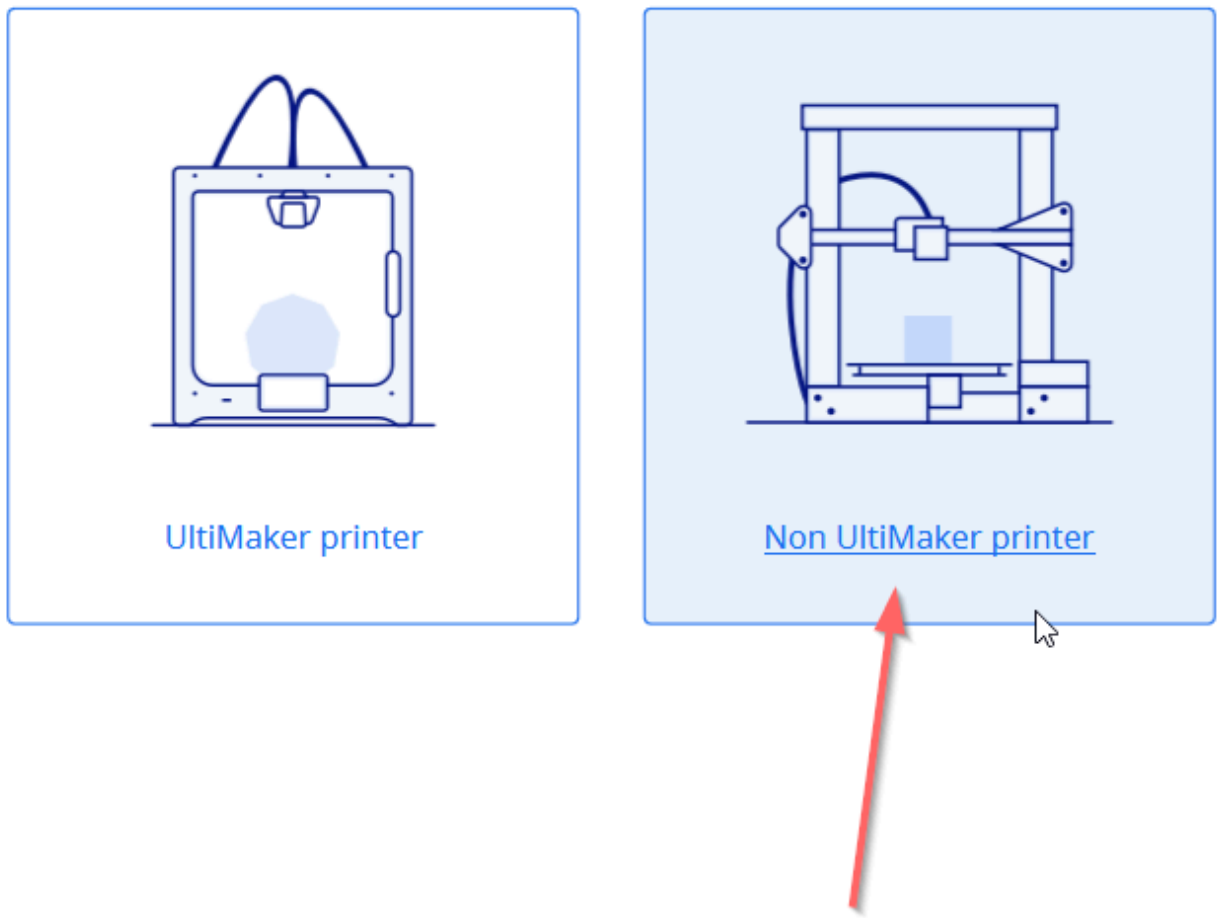


Click on **Add a Non-Ultimaker Printer**.

Step 4: Add a Non-Networked Printer

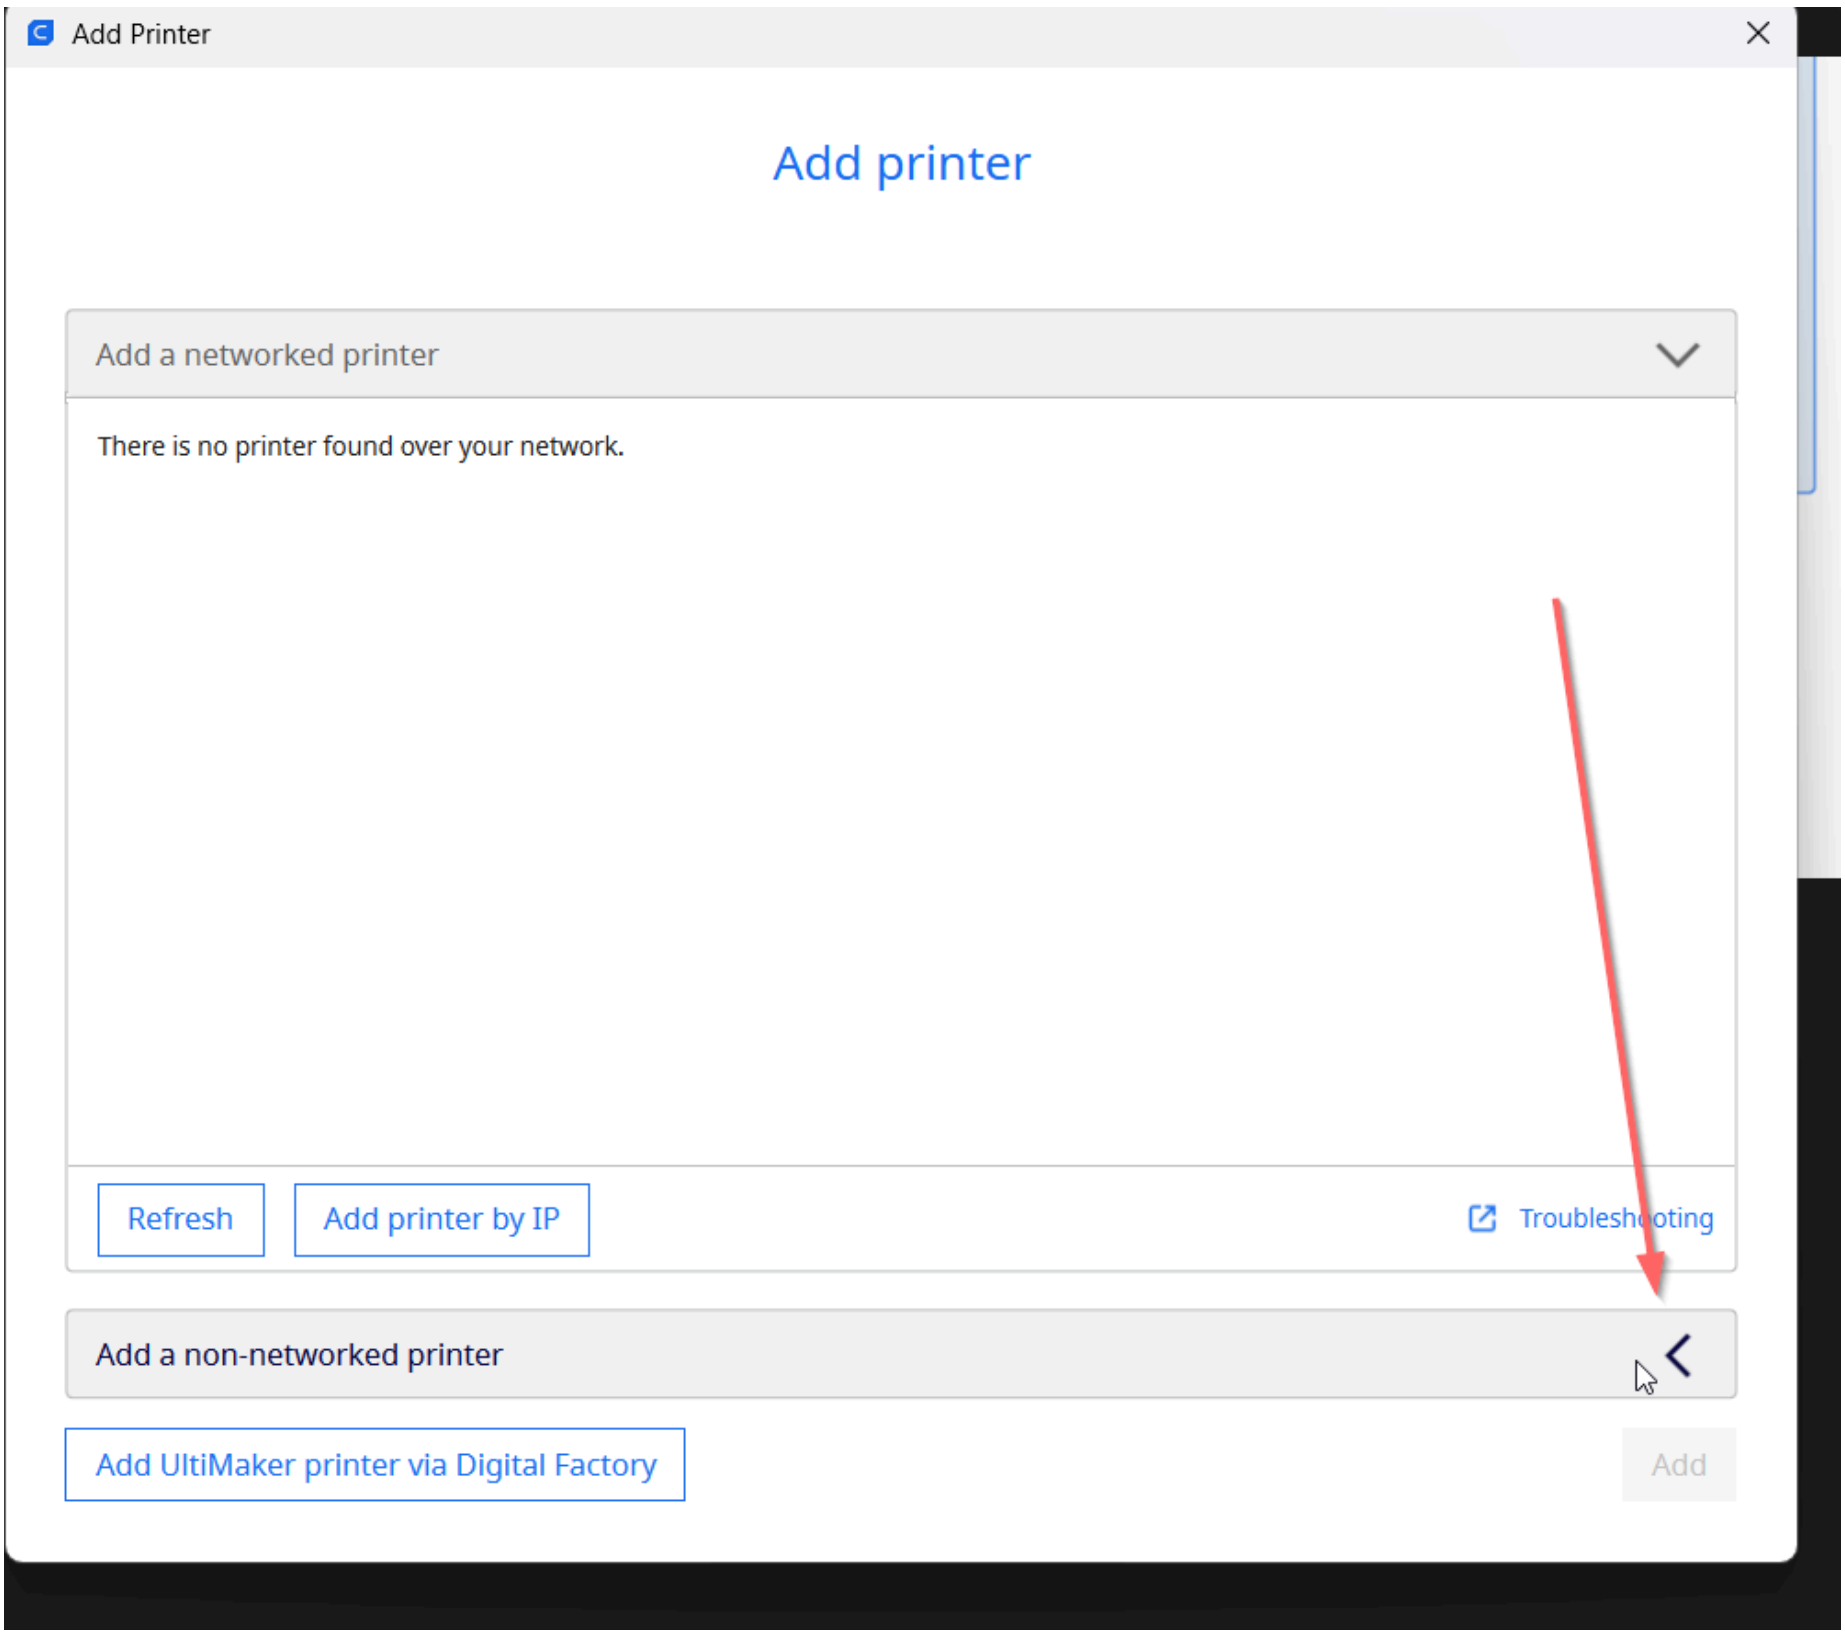


Choose **Add a non-networked printer**.

Step 5: Select Your Printer Model

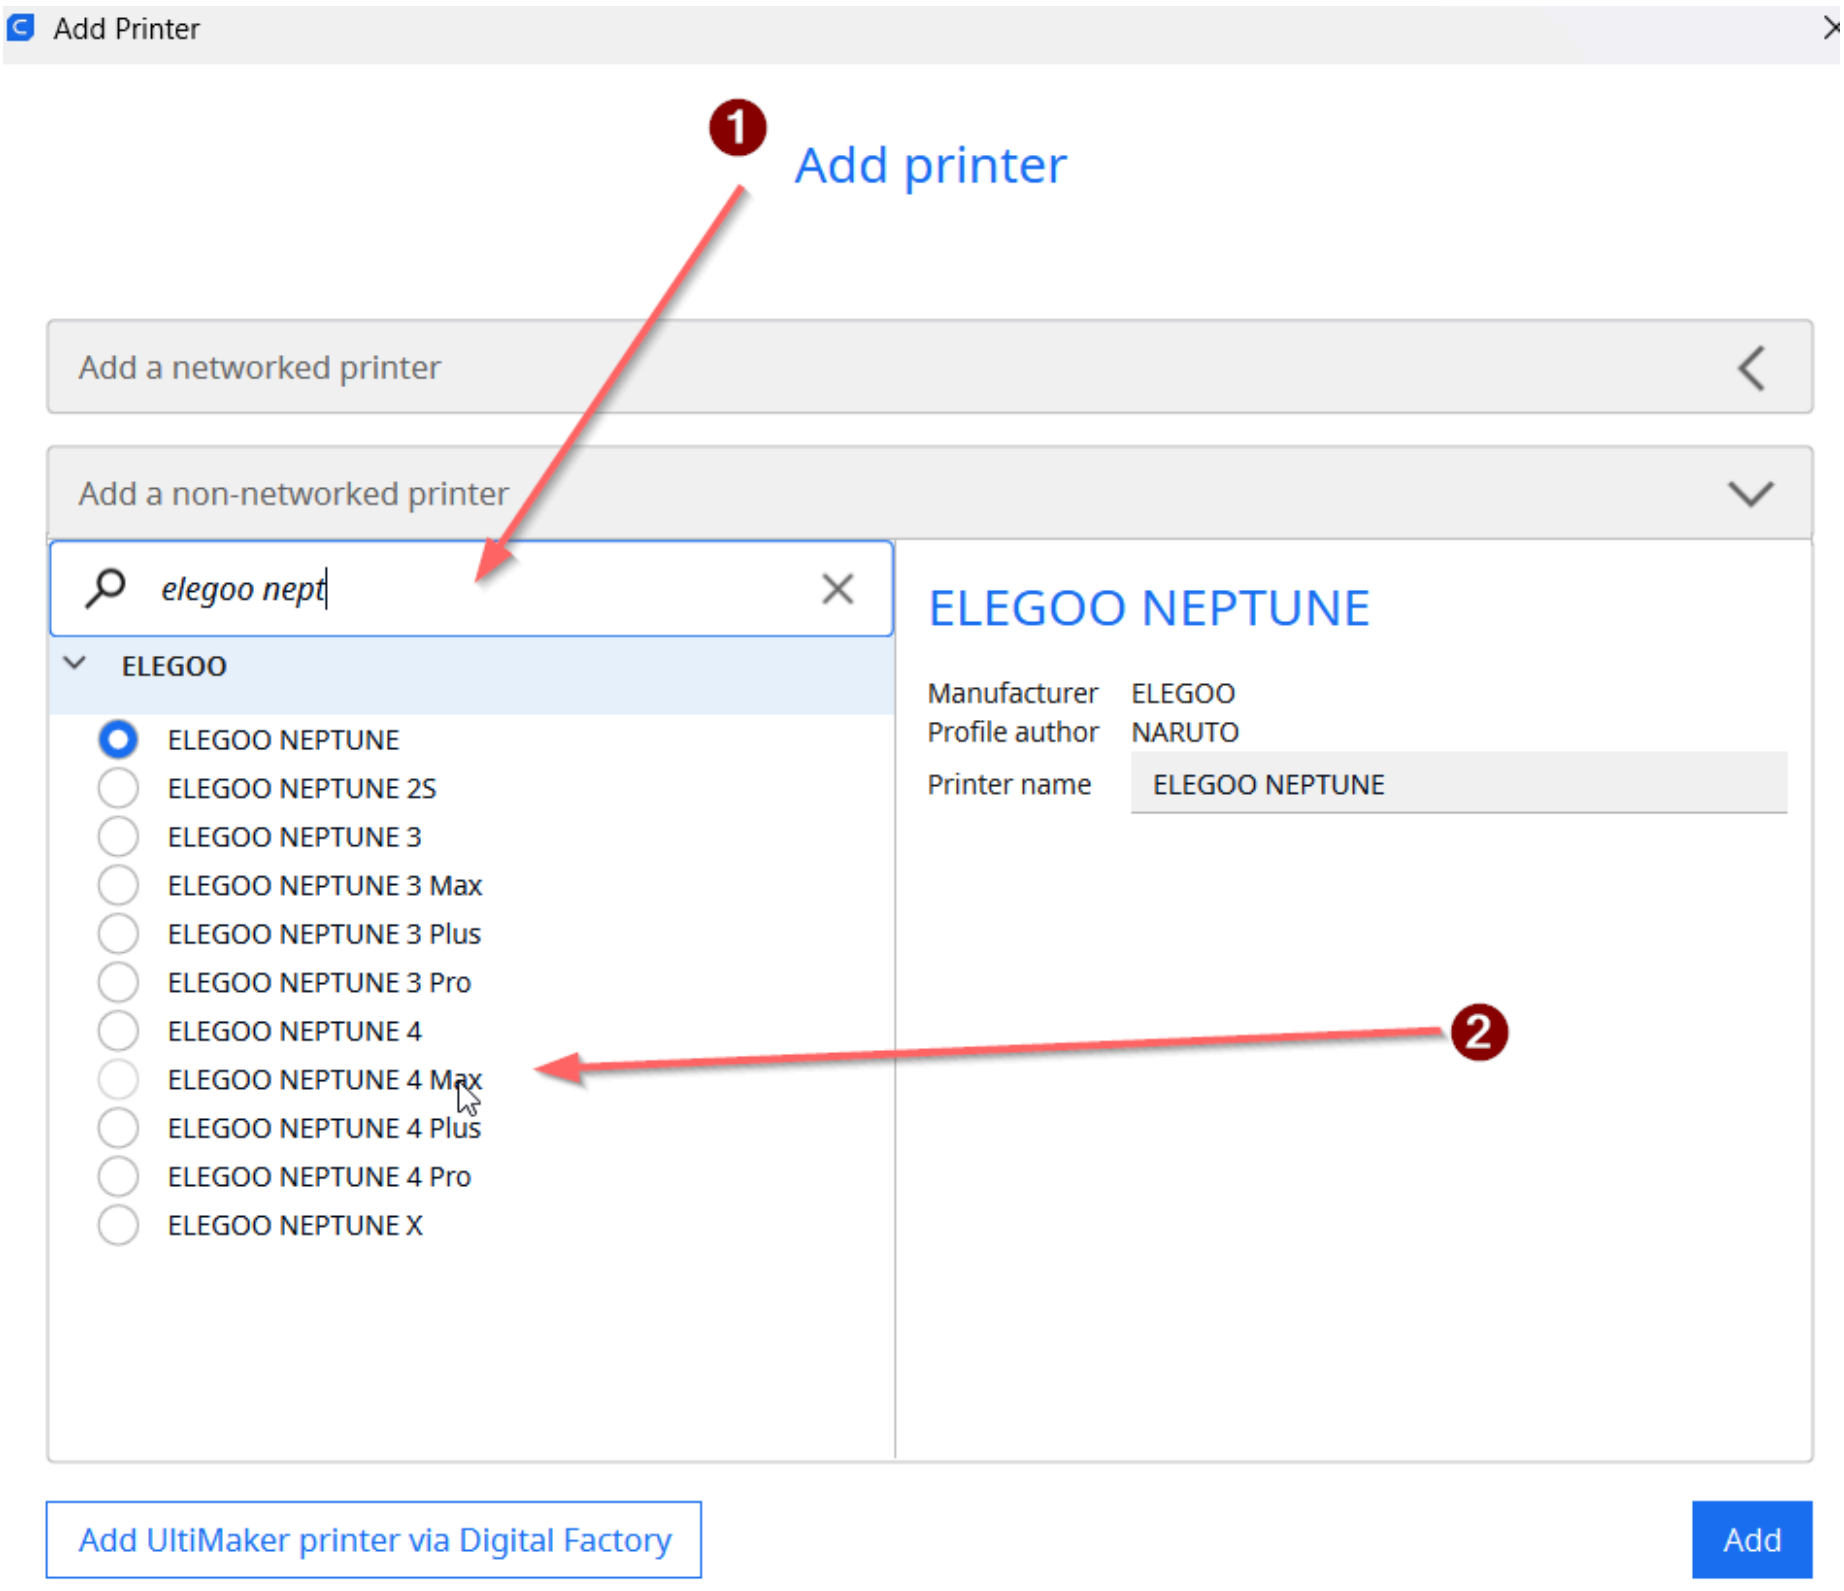


1. Search for your printer model
2. In my case, I selected **Elegoo Neptune 4 Max**
3. Click on the printer name

Step 6: Add the Printer

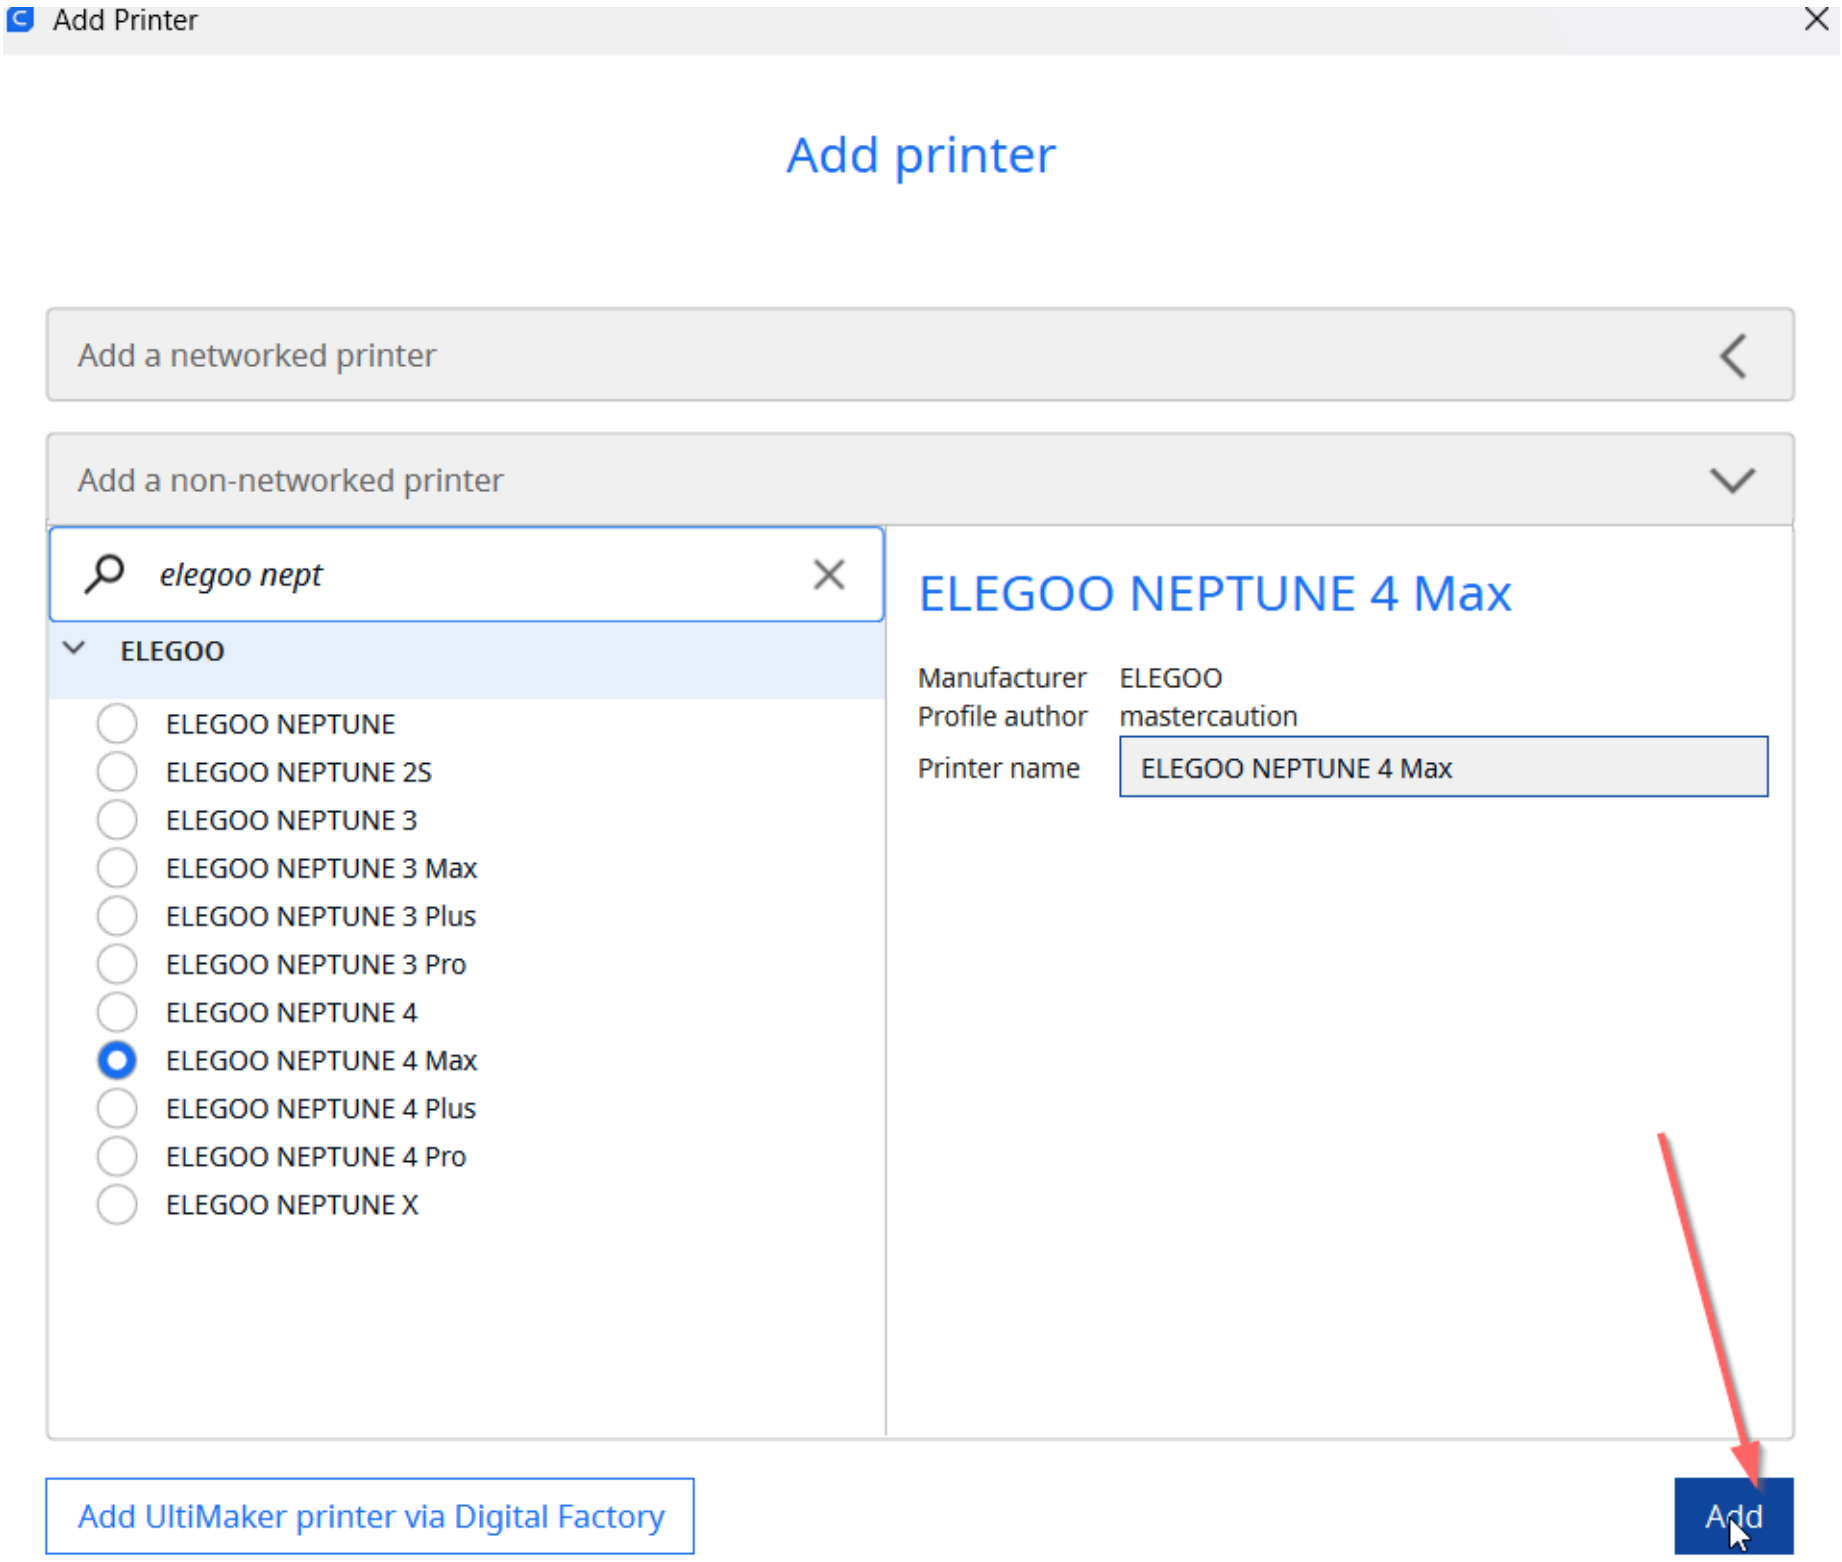

Click on **Add**.

Step 7: Printer Added Successfully

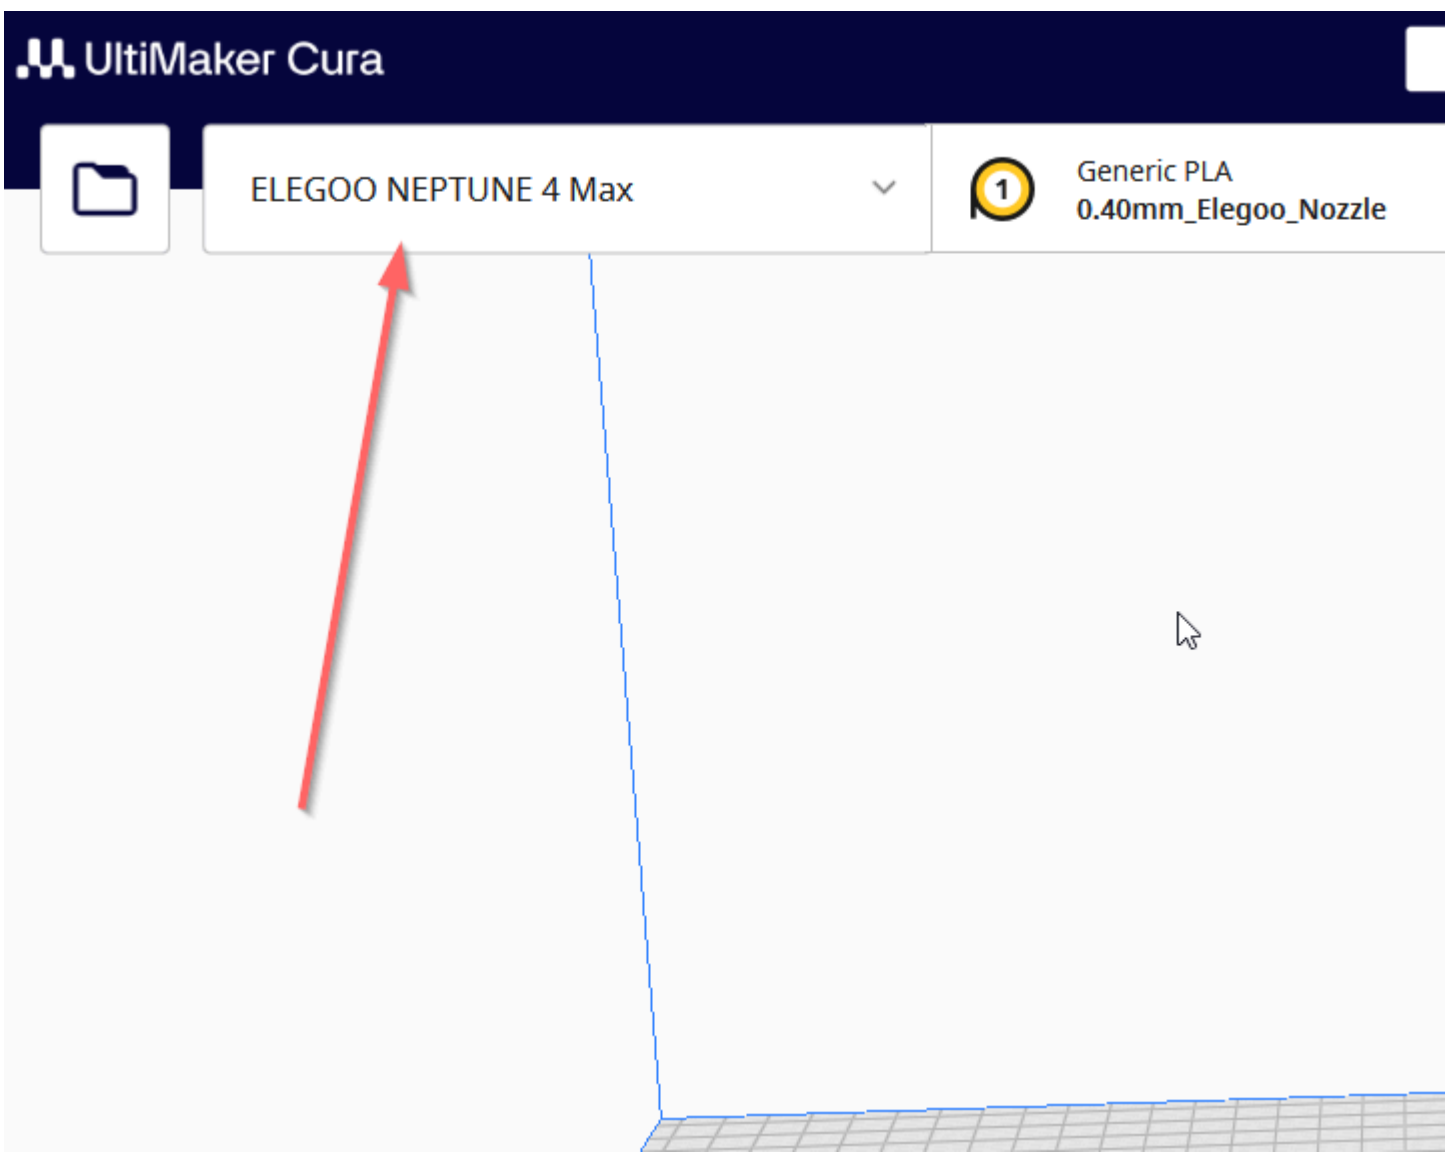

The printer is now successfully added and ready to use in Ultimaker Cura.

You can now start slicing models and configuring print settings for your printer.